


RMOD (RELAY MODULE) TO UNIT WIRING DIAGRAM

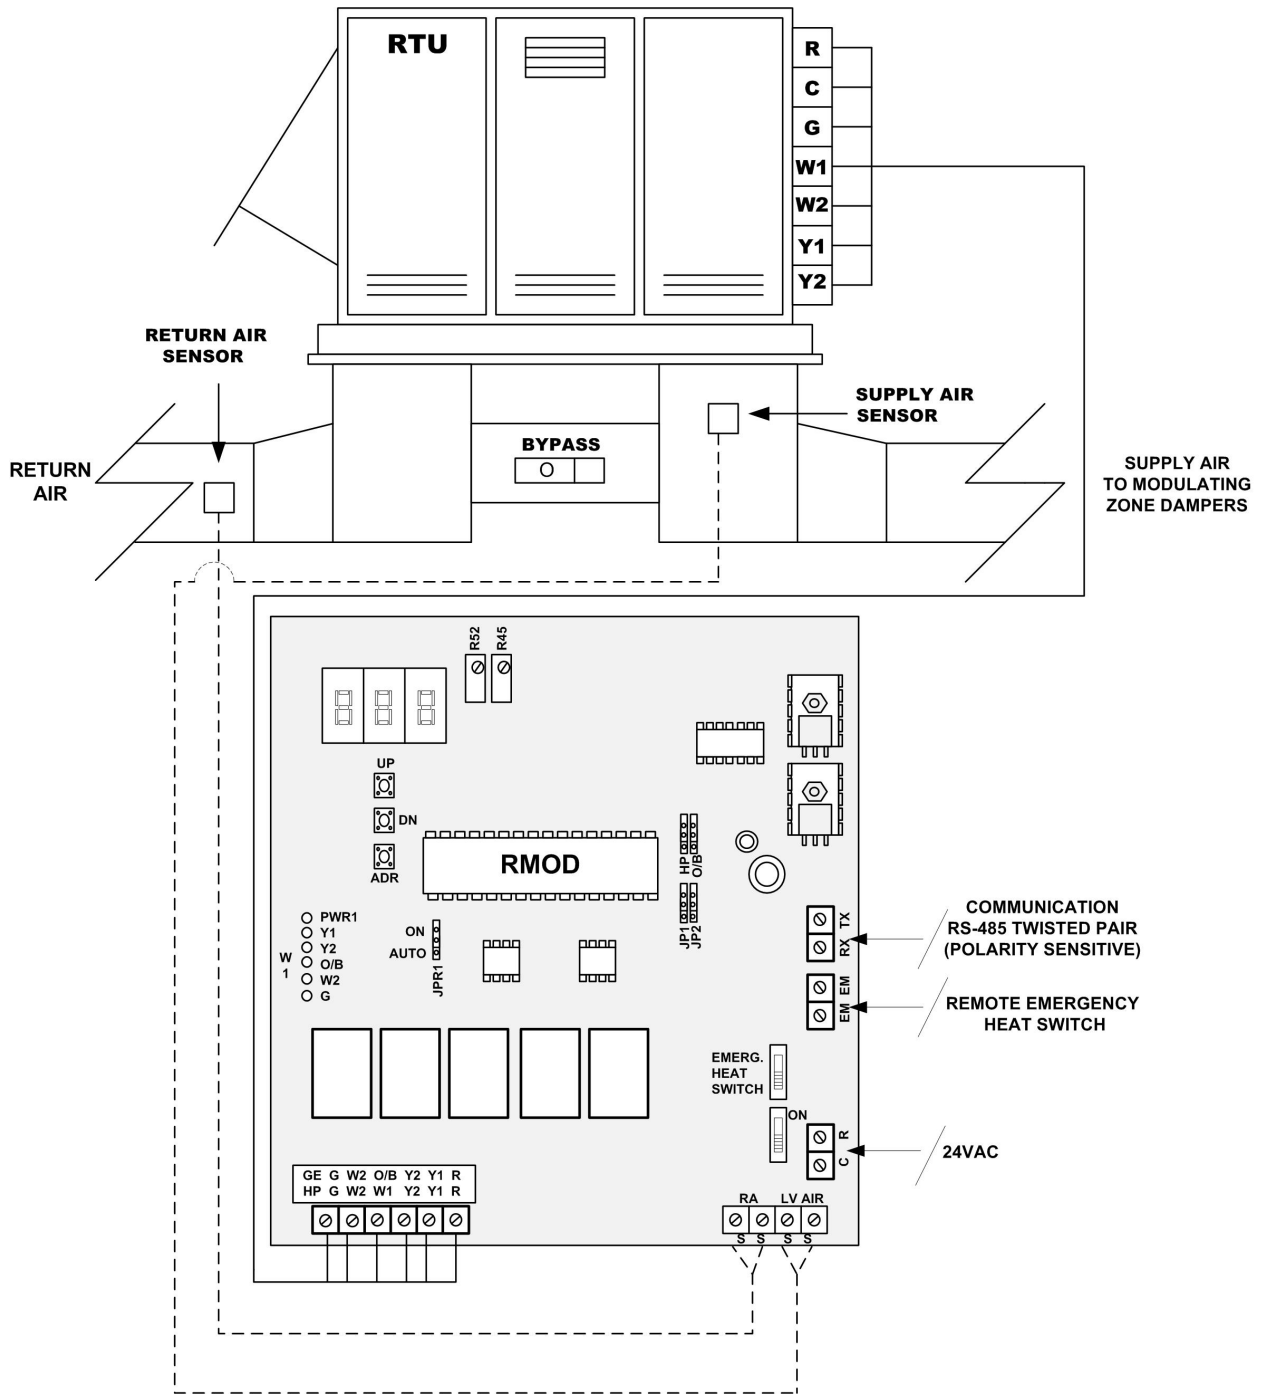

- Minimum 18 AWG thermostat wire.
- Use shielded conductor for RA & LV.
- Y2 & W2 terminals are not used for gas/electric single stage units.
- SA (supply air sensor) controls low and high temperature limits and heat/cool staging.
- RA (return air sensor) controls unit operation in communication failure mode.
- Part# **LAT** for all sensors.
- Keep sensor wires and power wires separate.

NOTE: Shorted wiring or sensors cause a low temperature reading. Open wiring or sensors cause a high temperature reading.